

Release Notes

SEE Electrical Expert V4R3 Service Pack 2 (4.82/C)



Shaping the Future of the Electrical PLM, CAD and Simulation

Table of Contents

Release N	otes	1
I. Chang	ges and Enhancements Made in SEE Electrical Expert V4R3 Service Pack 2 (4.82/C final	
	ompared to V4R3 Service Pack 2 (4.82/B)	
I.A. N	ew Features and Enhancements	3
I.B. F	ixed Issues	4
I.C. K	nown Issues and Workarounds	5
I.D. Li	mitations and Restrictions	8
I.D.1.	SEE Electrical Expert	8
I.D.2.	SEE Electrical 3D Panel	9
I.D.3.	SEE Automatic Diagram Generation Module	9
I.D.4.	Concurrent Engineering Module (Multi-User Mode)	9
I.D.5.	Open Data Module	
I.D.6.	End Fitting Module	.10
I.D.7.	3D Panel For SolidWorks Module	10
I.D.8.	Macro	11
I.D.9.	SmarTeam Integration Module	11
I.E. C	ompatibility with Other IGE+XAO Products	11
I.E.1.	SEE Project Manager	11
I.E.2.	SEE Access Control	11
I.E.3.	SEE Automatic Diagram Generation	11
I.E.4.	SEE Electrical 3D Panel	12
I.E.5.	SEE Electrical Jigboard	12
I.F. S	ystem Requirements	12
I.F.1.	Advisable System Configuration	12
I.F.2.	Windows Compatibility	13
I.F.3.	Virtual Solutions Compatibility	13

I. Changes and Enhancements Made in SEE Electrical Expert V4R3 Service Pack 2 (4.82/C final version) Compared to V4R3 Service Pack 2 (4.82/B)

I.A. New Features and Enhancements

Project

Improved the process of the automatic project repairing.
 In case of failure of a project repair process (automatically launched in particular cases), the project cannot be opened and a relevant message is displayed.

Electric Data Explorer

 Execution of [Ctrl + Double click] on a Terminal strip displays the list of the terminals belonging to that Terminal strip, with possibility for navigation to terminals.

Environment Manager

- In the Equipment Catalogue, the "Date of update" field is updated or filled in (in case of empty value) at execution of the relevant functionalities, available in SEE Electrical Expert, which allow or initiate creation, importation and modification of Equipment Codes. The field is not updated in the following cases:
 - ✓ Modification of Equipment Codes directly in the Access base.
 - Download of Equipment Codes from CSV and XML files.
 - Download of Equipment Codes having ASCII Formatted format, dBase format and Class format.
 - ✓ Modification of a field value via the command Edit > Change field value....
 - ✓ Modification of a filed via the command Tools > Add or Modify field into multiple classes.

PLC I/O Configuration Manager

 Via the SLF generation process, the interfaces are also exported in the generated PLC sheets (which is not possible via the Block generation process).



I.B. Fixed Issues

3D Panel

BM23613	The 3D Panel sheets are duplicated in the EDE – each displayed also within the <i>Tree view of sheets</i> , under the Schematic Sheet with the
	same number.

Connectors

BM605204	Free attributes propagated in case of manual pin insertion.
BM605227	Lost the class when a connector is full (happens in case an already inserted plug is replaced).

Environment Catalogue

BM23582	The "Date of update" field is not updated after an import from the SEE
	Web Catalog.

Environment Manager

Livi official manager	
BM23453	When comparing two environments with the "New only" option
	activated, the modified entities are also treated.

Environment Method

BM605013	After an update of the environment, the backshell symbols are missing
	in the respective Connector method.

Messages

BM23579	Translation of the commands Import > Comments / Export > Comments
BM23652	Incorrect translation of the "Signal Continuity" Contact's Description
BM23674	Incorrect source texts and translations in the dialogue called via the Options > Database command in the Equipment Catalogue.
BM1401605	Wrong translation in the Terminal Strip methods for the Italian version.

Options & Variants

BM23411	Impossible to assign a validity on existing texts and drawings after
	modification of the configuration.
BM1300992	When generating a <i>PDF</i> file, the Validity button is not available.



O	th	er
---	----	----

BM23523	Wire List Import: Error message during the creation of SEE Electrical
	Expert sheets.

PLC I/O Manager

BM23586	At <i>SLF</i> generation, the second part of a rack is not generated and error message displayed.
BM23588	The <i>SLF</i> generation time is multiplied by 10 compared to the time consumed in V4R2 for the same configuration.
BM23590	The SLF generation does not work for a configuration with an interface.
BM23591	When a configuration is updated, the sheets of the other configuration are removed.
BM23680	The Channel update does not take into account the added comments and mnemonics.
BM1602503	A large address cannot be treated.

Protection

BM23593	Modules are abnormally Free with an Internet licence.
BM1300996	The programmed final date of the protection validity is incorrect

Translation Module

Translation Module		
	BM23598	The translation test does not work.

I.C. Known Issues and Workarounds

Issues to be fixed in V4R3 Service Pack 3 (4.83/A)

3D Panel

BM23570	The 3D Model of a device loaded in the 3D Panel is resized according to the dimensions in the catalogue.
BM605213	When a report is created, the Report Designer cannot read the project database.
BM605214	After creating a 3D project and deleting it, the Load From Location command does not work properly (in the new project created)
BM605215	While working with a 3D project, the Save button and automatic saving do not work.
BM605216	The drilling defined via the command Print > Define Print Views is not displayed correctly.



Shaping the Future of the Electrical PLM, CAD and Simulation France Belgium Brasil Bulgaria България Canada China 中国 Danmark Deutschland España Greece Ελλάδα India भारत Italia Madagascar Morocco Uctive Nederland Polska Russia Россия Switzerland Tunisia בנום Türkiye United Kingdom USA

BM605217	The drill charts exported in DXF format are wrongly scaled in the generated files and cannot be inserted in SEE Electrical Expert.
BM1401601	The Mark in Drawing command (in the Components pane) does not work.

Blocks

BM23651	The Refresh command does not work.

Connectors

•••••••		
BM23637	Crash when opening the <i>CAD Properties</i> window from a connector's	
	pin.	
BM23671	Harness related information not displayed for equipment codes of pins	
	(in generated equipment lists).	

Copy/Paste

Oopy/r dotc	
BM15402	Cut/Paste Special or Copy/Paste Special do not work for equipment codes and notes of cables.
BM22078	When using Copy/Paste Special , lost the link between the terminal strip and the interface (to which it was assigned).
BM22523	After a Paste Special from the Sheet Explorer , the cable has a new tag.
BM22558	After using Paste Special for several sheets, lost the OPR links.
BM23112	When pasting a railway, the value of the user attribute is lost.
BM23561	When pasting a Backshell pin in the same connector, the pasted pin takes a new connector tag
BM605161	Wires calculated when opening terminal strip in the Terminal Strip Editor (after copying and pasting a terminal) are not replaced by Cable strands in all connections (in the Schematic Sheet).
BM1300937	When pasting a cable, two connections are created on each terminal.
BM1401491	When pasting connections with signal numbers, these are not numbered consecutively.
BM1401585	When pasting a multiple terminals several times, the order number of some of them is not correct.
BM1602251	The Paste special of all sheets from a group to another one does not work

DWG/DXF

BM23415	Impossible to use the \$TAG attribute in the Symbols tab of the Import DXF/DWG method.
BM23572	DWG lines are imported as Drawings instead of being imported as Connections.
BM1401589	Importation with smart DXF processing (advanced mode activated in the method) does not work.



Schematic Editor

dialogue

BM605205

BM1401573

BM1700113	Symbol Tagging method: In the <i>Numbering</i> tab, impossible to reset
	by group name the order number of the symbol tag.
Label Export	
BM23639	The "Open label software at the end of process" option (in the
	general Label settings accessed via Options > Settings) does not work.
	WOIK.
List Reports	
BM19221	Language problem with Edition Filters.
BM23502	Incorrect management of "From" – "To" Location in a Wiring List.
Messages	
BM 23343	Several incorrect translations in the French version.
BM23716	Wrong message displayed when inserting (drawing) a curve with no
	angle.
OLE Object	
BM1401579	OLE Object insertion does not work for <i>Windows</i> 10 version 1703
	•
Other	
Other BM23455	Add or Modify field into multiple classes command in the Equipme
	Catalogue (Tools menu): When adding a new field, lost the field name
	Catalogue (Tools menu): When adding a new field, lost the field name
	Catalogue (Tools menu): When adding a new field, lost the field name
BM23455	Catalogue (Tools menu): When adding a new field, lost the field name if you select the function before entering the name. When exporting the project in PDF format, some entities are missing in
BM23455 Printing	Catalogue (Tools menu): When adding a new field, lost the field name if you select the function before entering the name.
BM23455 Printing	Catalogue (Tools menu): When adding a new field, lost the field name if you select the function before entering the name. When exporting the project in PDF format, some entities are missing in
BM23455 Printing	Catalogue (Tools menu): When adding a new field, lost the field name if you select the function before entering the name. When exporting the project in PDF format, some entities are missing in
BM23455 Printing BM1401542	When exporting the project in PDF format, some entities are missing in

When opening a project, the sheets and the project methods are empty.

Navigation: Hyperlinks are not displayed in the Cable CAD Properties



France Belgium Brasil Bulgaria България Canada China 中国 Danmark Deutschland España Greece Ελλάδα India भारन Italia Madagascar Morocco المراجب Nederland Polska Russia Россия Switzerland Tunisia עננים Türkiye United Kingdom USA

Sheets Explorer	Sh	eets	Exp	lorer
-----------------	----	------	-----	-------

BM23420	Impossible to create a location on a new group.
BM1602484	Crash when executing a right-click on the groups.

Signals

BM22989	Wrong starting number when numbering by symbol.

Title Block

The Block		
	BM23284	Incorrect Metacommand attributes list.

Translation

BM23443	Request for having the position settings available in the <i>Translation</i> dialogue (called from the Process menu), in order to be able to set different positions for the text translations in the different languages
	without opening the method.

I.D. Limitations and Restrictions

I.D.1. SEE Electrical Expert

- ✓ SEE Electrical Expert cannot be run under Windows XP.
- ✓ SEE Electrical Expert V4R3 needs a Flex LM version that is equal or upper to 11.14.02 to use this type of protection. The "Visual C++ Redistribute for Visual Studio 2015" component has to be installed on the server where Flex LM is installed. Normally, this component is automatically installed with the Windows Update.
- ✓ Project maximal size is 1.8 GB.
- ✓ The multi-language features of a project are protected by the "Translation" license.

 Editing texts or attributes is possible to be carried out in all project languages only provided you have the "Translation" module included in your license.

 If you do not have the "Translation" module, you are allowed to consult the project in each project language but modifications can only be made in the "main" language.
- ✓ The migration process does not recreate the hyperlinks in projects created with V4R1 or previous versions of SEE Electrical Expert. To have the hyperlinks available on migrated projects, you have to rebuild the cross references and then generate the part lists and table of contents again.

France Belgium Brasil Bulgaria България Canada China 中国 Danmark Deutschland España Greece Ελλάδα India भारन Italia Madagascar Morocco ארביי Nederland Polska Russia Россия Switzerland Tunisia ארביי Türkiye United Kingdom USA

- ✓ PDF Export: To activate the hyperlinks in Adobe Acrobat Pro, click Edit > Preferences..., select the Documents category in the left pane of the displayed Preferences window and then choose "Never" from the drop-down list available for the "View documents in PDF/A mode" setting.
- ✓ SEE Workspace (SWS files generated through Options/Customize Export button) that were saved with versions lower or equal to V4R1 are not supported by V4R3.
- ✓ **SEE Equipment Database** supports *MS SQL* Server **2008**, **2012** and **2014** ("Part List Manager" license is required).
- ✓ Versions greater or equal to V4 do no longer support MS SQL or Oracle database for the parts list processes.
- ✓ If you are using *Local Server Borrowing* (LSB) or *Internet License Server* (ILS) Protection, it is impossible to change the software language after the installation.

I.D.2. SEE Electrical 3D Panel

✓ SEE Electrical 3D Panel has its own installer and is not installed with SEE Electrical Expert.

I.D.3. SEE Automatic Diagram Generation Module

- ✓ The SEE Automatic Diagram Generation module has its own installer and is not installed with SEE Electrical Expert.
- ✓ This module is protected by a license.
- ✓ The SEE Automatic Diagram Generation module needs MS Excel and is compatible with the
 32 and 64 bits versions of MS Excel 2010, 2013 and 2016.
- ✓ It is not possible to add variables for layout or harness blocks in the Block Param Editor.

I.D.4. Concurrent Engineering Module (Multi-User Mode)

- √ The Concurrent Engineering module (Multi-User mode) works with MS SQL Server 2012 and 2014 database to store project data.
- ✓ The Concurrent Engineering module needs SEE User Access.
- ✓ In Multi-User mode (*Concurrent Engineering* module), the option "Automatically save project content when closing project" (in the *Settings* window of *SEE Electrical Expert*) does not work when not enabled.

I.D.5. Open Data Module

✓ The Open Data module needs MS Excel and is compatible only with the 32-bits version.

I.D.6. End Fitting Module

✓ To migrate the data stored in cable attributes (until V4R1) to the new V4R3 extremity attributes, the "End Fitting migration to V4R3 (4.80)" plugin must be installed and activated.

I.D.7. 3D Panel For SolidWorks Module

- √ The "old" 3D Panel for SolidWorks module is no longer supported by SEE Electrical Expert versions that are greater or equal to V4R3.
- ✓ A 3D panel layout created with this module (before V4R3) cannot be migrated to the new 3D Panel module.

I.D.8. Macro

✓ To execute a macro on SEE Electrical Expert versions greater or equal to V4R3, you need to have a VBA version 7.1 32 bit (not 64 bit) installed.

I.D.9. SmarTeam Integration Module

✓ The SmarTeam Integration module of SEE Electrical Expert V4, V4R1, V4R2, and V4R3 supports the SmarTeam releases V5R19 to V5R27.

I.E. Compatibility with Other IGE+XAO Products

I.E.1. SEE Project Manager

SEE Electrical Expert V4R3 Service Pack 2 (4.82/C) is compatible with SEE Project Manager V8R2 SP 7 - Patch K or L, and V8R3 Patch C.

I.E.2. SEE Access Control

SEE Electrical Expert V4R3 Service Pack 2 (4.82/C) supports only the version **4.50/E** of SEE User Access.

Customers using older SEE User Access versions have to migrate their databases via the SEE User Access Admin Tool.

I.E.3. SEE Automatic Diagram Generation

SEE Electrical Expert V4R3 Service Pack 2 (4.82/C) supports the version V4.80/A of SEE Automatic Diagram Generation.

I.E.4. SEE Electrical 3D Panel

SEE Electrical Expert V4R3 Service Pack 2 (4.82/C) supports V1R4 Service Pack 1 of SEE Electrical 3D Panel.

I.E.5. SEE Electrical Jigboard

SEE Electrical Expert V4R3 Service Pack 2 (4.82/C) supports the version V4R7 of SEE Electrical Jigboard.

I.F. System Requirements

I.F.1. Advisable System Configuration

For Mono-User Mode:

GROUP

- Microsoft Windows 7 Home Premium, Professional, Ultimate, Enterprise
- 64 bits Operating System to be installed on a 64 bits computer
- Processor: i3 class. 2 GHz.
- RAM: 4 GB.
- 500 MB of free disk space required for the installation.
- In order to optimize the SEE Electrical Expert performance on your computer, it is recommended that you use an SSD hard drive
- Graphic Card: 1280 x 1024.

For Multi-User Mode (Concurrent Engineering):

The requirements are different for the Server and for the Client.

For the Server:

- Microsoft Windows Server 2008 R2 64 bits or newer.
- Microsoft SQL Server 2008 R2 (PROFESSIONAL version strongly recommended; EXPRESS EDITION version possible to be used with limitations).
- Processor: i7 class, 3 GHz.
- RAM: 12 GB (+ 1 GB by client).
- 200 GB of free disk space required for the installation.
- LAN (Network Card): 1 GB.

For the Client:

- Microsoft Windows 7 (64 bits).
- Processor: i3 class, 2 GHz.

- RAM: 4 GB.
- 500 MB of free disk space required for the installation.
- In order to optimize the SEE Electrical Expert performance on your computer, it is recommended that you use an SSD hard drive
- Network Card: 1 GB.
- Graphic Card: 1280 x 1024.

For using the 3D Panel:

- Microsoft Windows 7 Home Premium, Professional, Ultimate, Enterprise.
- Processor: i5 class, 2 GHz.
- RAM: 4 GB.
- 1 GB of free disk space required for the installation with the 3D Parts library provided by default.
- Graphic Card: full support of OpenGI required, as well as 1 GB of dedicated memory.

I.F.2. Windows Compatibility

SEE Electrical Expert V4R3 supports:

- ✓ Microsoft Windows 10 Pro (32 and 64 bits), as well as Microsoft Windows 10 Enterprise (32 and 64 bits).
- Microsoft Windows 8 and Microsoft Windows 8.1 (except for the RT version for mobile devices).
- ✓ Microsoft Windows 7.

Microsoft Windows XP is not supported by SEE Electrical Expert V4R3.

I.F.3. Virtual Solutions Compatibility

SEE Project Manager and SEE Electrical Expert are compatible with the Microsoft App-V and VMWare virtual solutions.

Microsoft App-V or VMWare

No compatibility issues reported for these two virtual solutions.