

STEROWNIK	MODUŁ	ADRES	SCHEMAT	MNEMO	OPIS
PLC1	MOD2	I00.0	6	I00.0	START M1
PLC1	MOD2	I00.1	6	I00.1	DO PRZODU M2
PLC1	MOD2	I00.2	6	I00.2	DO TYŁU M2
PLC1	MOD2	I00.3	6	I00.3	WOLNE
PLC1	MOD2	I00.4	6	I00.4	WOLNE
PLC1	MOD2	I00.5	6	I00.5	WOLNE
PLC1	MOD2	I00.6	6	I00.6	WOLNE
PLC1	MOD2	I00.7	6	I00.7	WOLNE
PLC1	MOD2	O00.0	7	O00.0	START M1
PLC1	MOD2	O00.1	7	O00.1	DO PRZODU M2
PLC1	MOD2	O00.2	7	O00.2	DO TYŁU M2
PLC1	MOD2	O00.3	7	O00.3	WOLNE
PLC1	MOD2	O00.4	7	O00.4	WOLNE
PLC1	MOD2	O00.5	7	O00.5	WOLNE
PLC1	MOD2	O00.6	7	O00.6	WOLNE
PLC1	MOD2	O00.7	7	O00.7	WOLNE

=
+