

LOKALIZACJA 1	WYJŚCIE	NUMER POŁĄCZENIA	LOKALIZACJA 2	WEJŚCIE
A01	Q5:2	2	A01	KM1:A2
A01	Q5:2	2	A01	X2:10
A01	Q5:2	2	P01	MOD2:1M
A01	Q5:3	3	A01	U1:4
A01	Q5:4	4	A01	Q1:12
A01	S1:22	6	A01	Q3:23
A01	S1:22	6	A01	KM1:13
A01	S1:22	6	A01	X2:1
A01	U1:1	L10	A01	Q4:2
A01	U1:2	L11	A01	Q4:4
A01	X1:1	L01	ZE	ZE:L1
A01	X1:1	L01	A01	Q1:5
A01	X1:2	L02	ZE	ZE:L2
A01	X1:2	L02	A01	Q1:3
A01	X1:3	L03	ZE	ZE:L3
A01	X1:3	L03	A01	Q1:1
A01	X1:4	U1	A01	KM1:2
A01	X1:4	U1	M01	M1:U
A01	X1:5	V1	A01	KM1:4
A01	X1:5	V1	M01	M1:V
A01	X1:6	W1	A01	KM1:6
A01	X1:6	W1	M01	M1:W
A01	X1:7	U2	A01	KM2:2
A01	X1:7	U2	M02	M2:U
A01	X1:8	V2	A01	KM2:4
A01	X1:8	V2	M02	M2:V
A01	X1:9	W2	A01	KM2:6
A01	X1:9	W2	M02	M2:W
A01	X1:PE	PE	ZE	ZE:PE
A01	X1:PE	PE	M01	M1:PE
A01	X1:PE	PE	M02	M2:PE
A01	X1:PE	PE	A01	X1:PE
A01	X2:1	6	A01	KM1:13

LOKALIZACJA 1	WYJŚCIE	NUMER POŁĄCZENIA	LOKALIZACJA 2	WEJŚCIE
A01	X2:1	6	P01	X3:1
A01	X2:10	2	P01	X3:10
A01	X2:10	2	A01	KM3:A2
A01	X2:10	2	A01	KM1:A2
A01	X2:10	2	A01	KM2:A2
A01	X2:11	100.0	A01	KM1:54
A01	X2:11	100.0	P01	X3:11
A01	X2:12	100.1	A01	KM2:54
A01	X2:12	100.1	P01	X3:12
A01	X2:13	100.2	P01	X3:13
A01	X2:13	100.2	A01	KM3:54
A01	X2:2	8	A01	Q2:23
A01	X2:2	8	P01	X3:2
A01	X2:3	7	A01	KM1:14
A01	X2:3	7	P01	X3:3
A01	X2:4	11	A01	KM2:13
A01	X2:4	11	P01	X3:4
A01	X2:5	13	A01	Q3:24
A01	X2:5	13	P01	X3:5
A01	X2:6	10	A01	KM2:14
A01	X2:6	10	P01	X3:6
A01	X2:7	14	A01	KM2:61
A01	X2:7	14	P01	X3:7
A01	X2:8	4	A01	KM1:53
A01	X2:8	4	P01	X3:8
A01	X2:8	4	A01	Q5:4
A01	X2:9	2	P01	X3:9
A01	X2:9	2	A01	Q5:2
A01	X2:9	2	A01	X2:10
A01	X2:9	2	P01	MOD2:1M
P01	H1:X1	000.0	P01	MOD2:0.0
P01	H1:X2	2	P01	H2:X2
P01	H2:X1	000.1	P01	MOD2:0.1