

OZNACZENIE	TYP / PRZEKRÓJ	LOKALIZACJA WYJŚCIA	LOKALIZACJA WEJŚCIA	UWAGI
W1	U-1000 R2V 4G25	A01	ZE	
W2	U-1000 R2V 4G4	A01	M01	
W3	U-1000 R2V 4G4	A01	M02	
W4	U-1000 R2V 12G1,5	A01	P01	
W5	U-1000 R2V 7G1,5	A01	P01	