

Product	Version	Theme	Environment	Date	Department	Person	Language
SPM PLM	V4Rx	Customization	Windows		After Sales	Technical Support	EN

Subject:

Define property card attributes order and visibility for the PLM clients

Description:

This document explains how to define the order and visibility of the property card attributes in the following SEE Electrical PLM Clients:

- Device Manager
- Connective Device Manager
- Topology
- SEE Harness Manager


Our proposed solution:

For TOPOLOGY

Under Topology, select an object to display its property card.

Then right click on an attribute name in this Property Card to display the contextual menu.


Click then on Display Attributes:

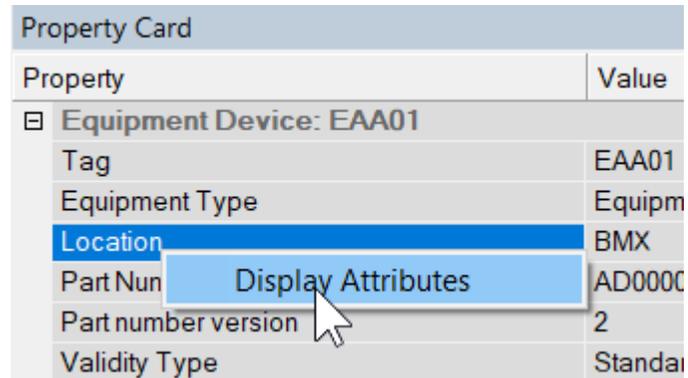

Property Card	
Property	Value
[-] Equipment Device: EAA01	
Tag	EAA01
Equipment Type	Equipm
Location	BMX
Part Num	AD0000
Part number version	2
Validity Type	Standar

A context menu is overlaid on the 'Part Num' row, with the 'Display Attributes' option selected. A mouse cursor is pointing at the 'Display Attributes' option.

The following dialogue opens up:

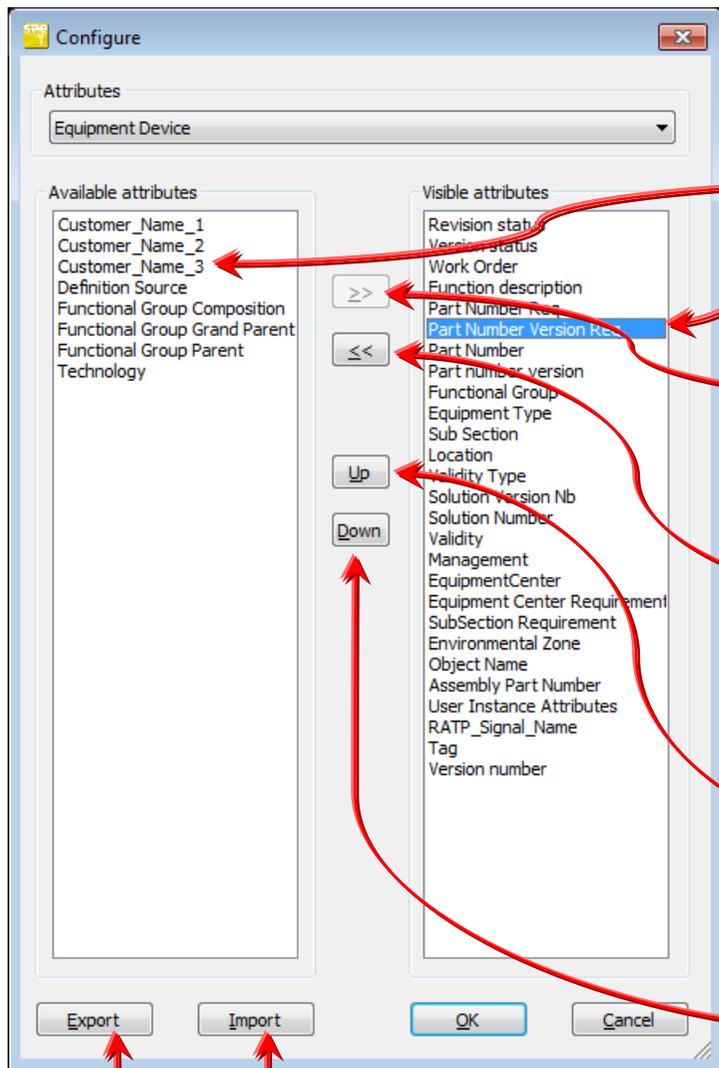

Select here the attribute
That you want to move,
add or remove

Click Here >>
To add attributes into
visible attributes

Click Here <<
To remove attributes
from visible attributes


Click Up
To move the attributes in
up of the list

Click Down
To move the attributes in
down of the list

Click on export to export
the configuration in a
xml file

Click on Import to
import the configuration
from a xml file

To change the property card of the other types of objects, select it in the upper combo-box:

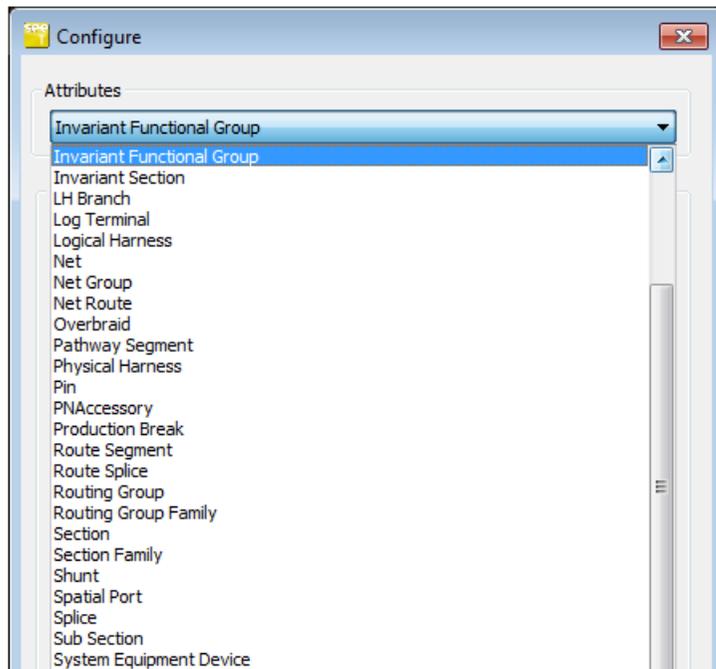

When the settings are defined, click on OK to save the result.

Your settings are now saved in 2 registry keys:

- [HKEY_CURRENT_USER\Software\IGE-XAO\SEE Topology\v4.70\ ControlBarSettings]
- [HKEY_CURRENT_USER\Software\IGE-XAO\SEE Topology\v4.70\DisplayAttributes],


Those keys can be exported and reimported to another computer, if you want to avoid users to load manually the xml file configuration that is obtained by the "Export" function.

Important remark

Before saving the register files, make sure that the Topology application is closed, registries are updated at closure time only.

For Device Manager

Under SEE Device Manager, select an object to display the property card.
Click on this icon in the property card toolbar to display the properties settings:

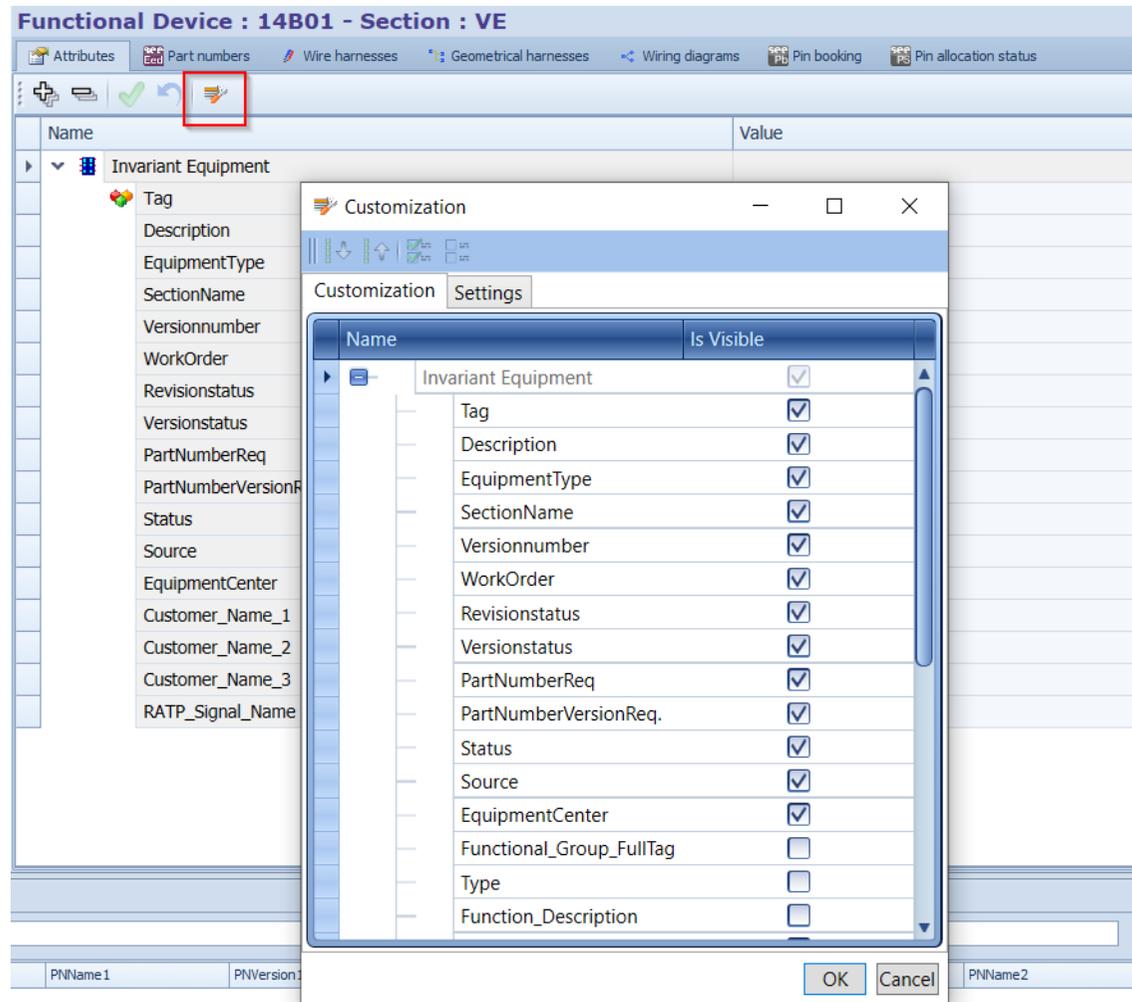

Those property card settings are saved in the "PropertyCardSettings.xml" file under the settings directory of the application, according to the version.

Example for **Device Manager** V4R73 patch F and user1:

C:\Users\User1\AppData\Roaming\IGE+XAO\SeeDeviceManager.exe_Url_ydugnb4eyk3ypzuklw1qat4erqoh1qka\4.73.7.4\DeviceSettings\Attributes

For Connective Device Manager

Similar to Device Manager for the customization of the display.

Those property card settings are saved in the "PropertyCardSettings.xml" file under the settings directory of the application, according to the version.

Example for **Connective Device Manager** V4R73 patch H and user1:

C:\Users\User1\AppData\Roaming\IGE+XAO\SEE_ConnectiveDevice_Mana_Url_sdjqii3x2umqqoqansa2jpcgiqo5owup\4.73.8.3\AttributesSettings

For SEE Harness Manager

Similar to Device Manager for the customization of the display.

Those property card settings are saved in the "PropertyCardSettings.xml" file under the settings directory of the application, according to the version.

Example for **See Harness Manager** V4R73 patch G and user1:

C:\Users\User1\AppData\Roaming\IGE+XAO\SeeHarnessManager.exe_Url_qj3ahhdxjr2jk2vvrfrmhn502fspsdhl\4.74.7.3\Attributes